



REMOVAL AND INSTALLATION INSTRUCTIONS

MAKE SURE YOU FOLLOW THE PROPER REMOVAL AND INSTALLATION INSTRUCTIONS THAT FIT YOUR APPLICATION ANY TIME YOUR FLEET-AIR FILTER IS SERVICED. FAILURE TO DO SO COULD RESULT IN A POOR SEAL, AND CAUSE DAMAGE TO THE ENGINE

REMOVAL AND INSTALLATION FOR OUTSIDE CANISTER:

1. REMOVE OUTSIDE CANISTER LID.
2. REMOVE AIR FILTER FROM CANISTER.
3. MAKE SURE INSIDE OF CANISTER IS CLEAN BEFORE INSTALLING YOUR FLEET-AIR FILTER.
4. REMOVE YOUR FLEET-AIR FILTER FROM THE BOX AND ANY PACKAGING (FILTER IS PRE-OILED AND READY FOR INSTALLATION).
5. INSTALL YOUR FLEET-AIR FILTER IN CANISTER.
6. REINSTALL OUTSIDE CANISTER LID MAKING SURE THAT THE FILTER HAS A TIGHT, FIRM SEAL.
7. REPEAT STEPS FOR OTHER OUTSIDE CANISTER.