



REMOVAL AND INSTALLATION INSTRUCTIONS

MAKE SURE YOU FOLLOW THE PROPER REMOVAL AND INSTALLATION INSTRUCTIONS THAT FIT YOUR APPLICATION ANY TIME YOUR FLEET-AIR FILTER IS SERVICED. FAILURE TO DO SO COULD RESULT IN A POOR SEAL, AND CAUSE DAMAGE TO THE ENGINE

REMOVAL AND INSTALLATION FOR UNDER-HOOD HOUSING:

1. REMOVE AIR FILTER HOUSING COVER.
2. REMOVE FILTER FROM HOUSING.
3. MAKE SURE HOUSING AND HOUSING NIPPLE IS CLEAN BEFORE INSTALLING YOUR FLEET-AIR FILTER.
4. REMOVE YOUR FLEET-AIR FILTER FROM THE BOX AND ANY PACKAGING (FILTER IS PRE-OILED AND READY FOR INSTALLATION).
5. APPLY A SMALL AMOUNT OF VASELINE TO THE INSIDE OF THE RUBBER SEAL FOR EASE OF INSTALLING.
6. SLIDE YOUR FLEET-AIR FILTER ONTO HOUSING NIPPLE, MAKE SURE YOUR FLEET-AIR FILTER HAS A PROPER SEAL AND NOT LOOSE FITTING.
7. REINSTALL AIR FILTER HOUSING COVER.